

Fig. 1 Attach board to panel using connector nuts. Three wires linking the T, R, and S (GND) circuits of the two boards are not shown in this view for clarity.

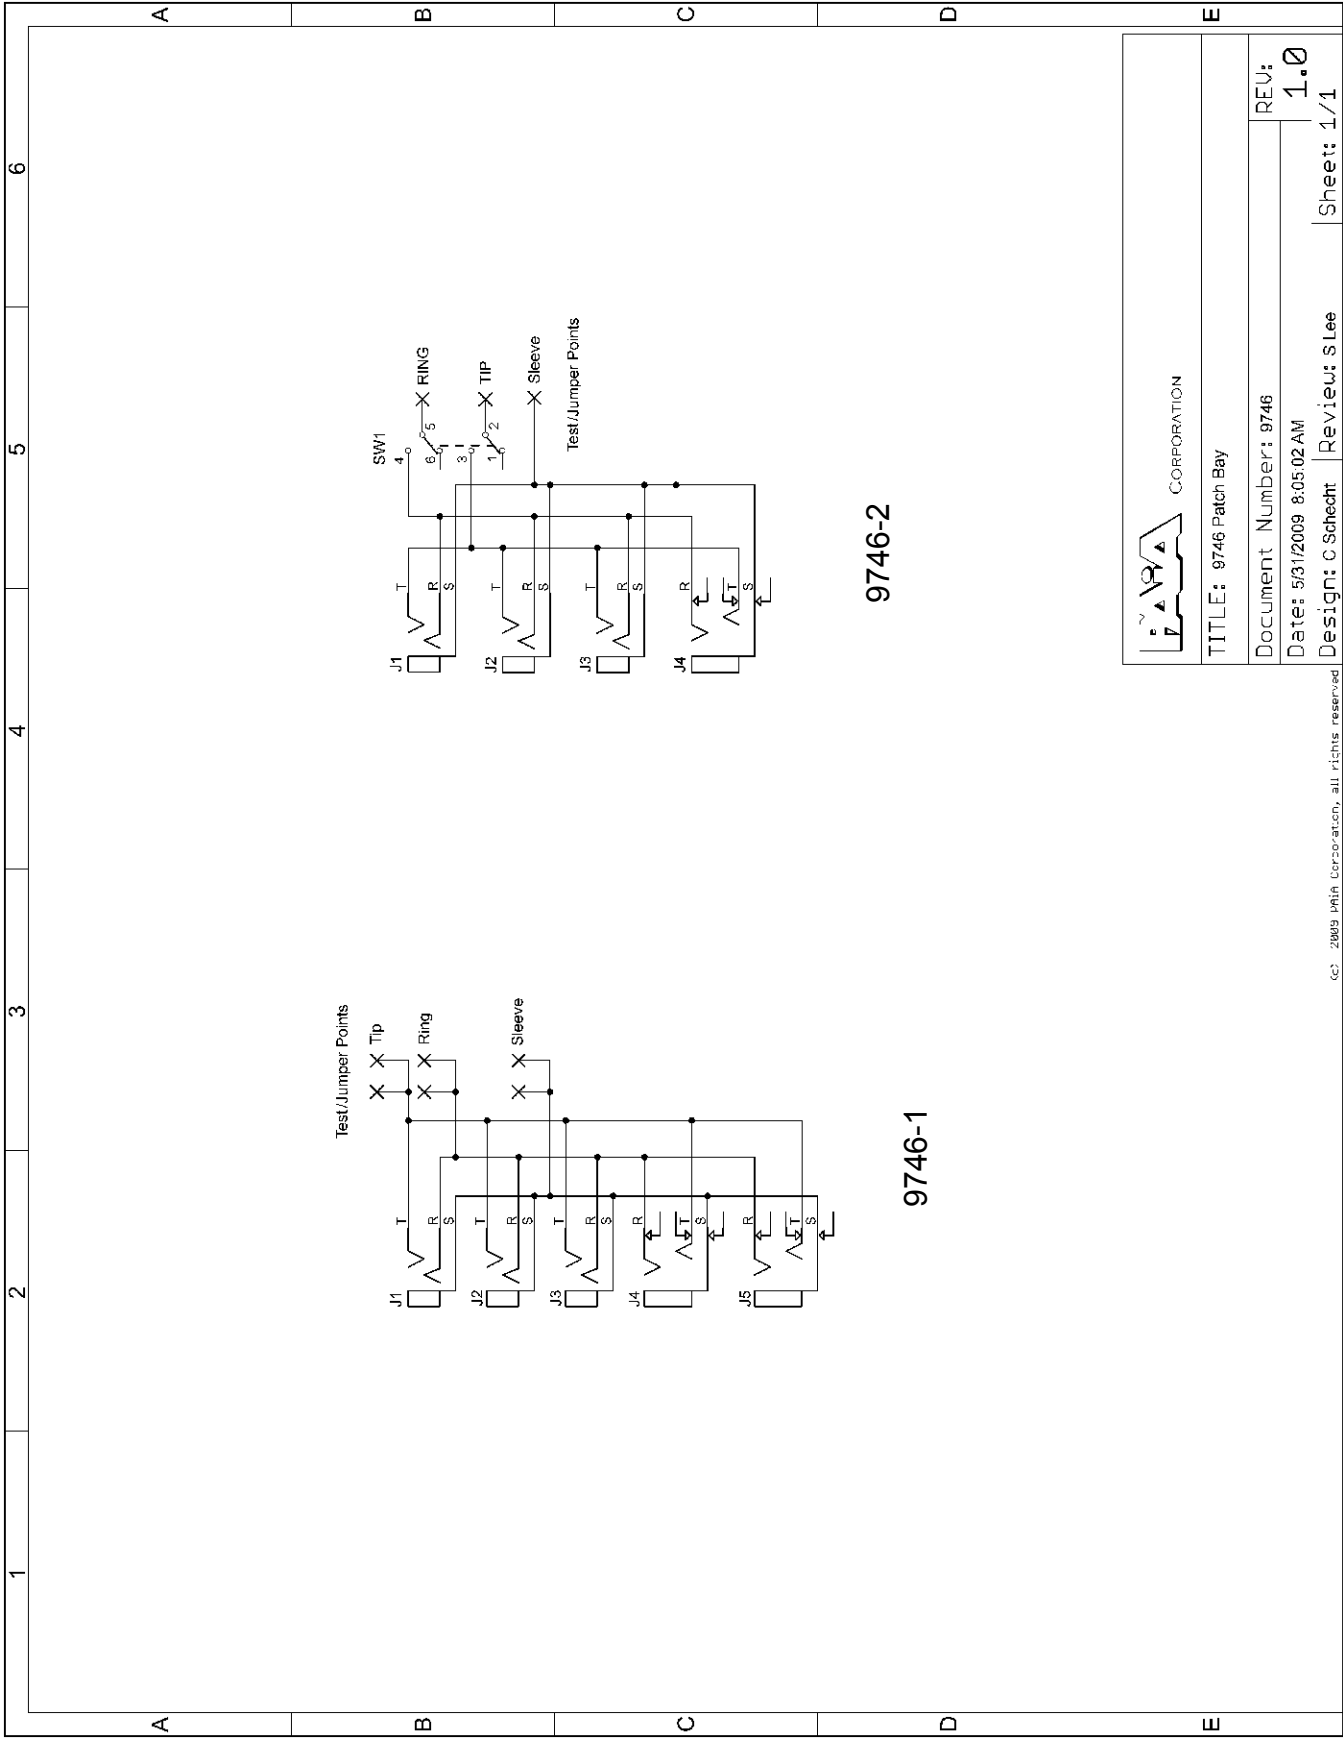


Fig.2 Patch Bay Schematic
 © 2009 PAIA Corporation

TITLE: 9746 Patch Bay	
Document Number: 9746	REV: 1.0
Date: 5/31/2009 8:05:02 AM	
Design: C Schecht	Review: S Lee
	Sheet: 1/1

© 2009 PAIA Corporation, all rights reserved.