


Attach board to panel using connector nuts. Shim control shafts and rotate controls to minimum. Install and tighten set-screw knobs to agree.

Fig. 1A

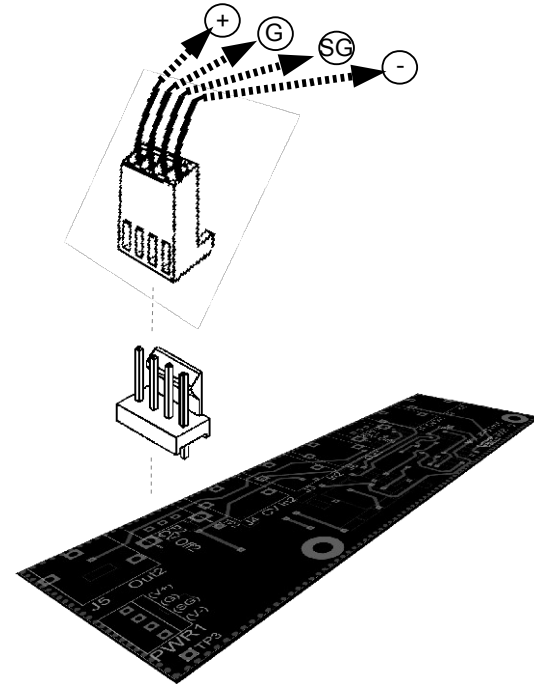

Orientation of power connector with respect to the printed-circuit-board.

Fig. 1B

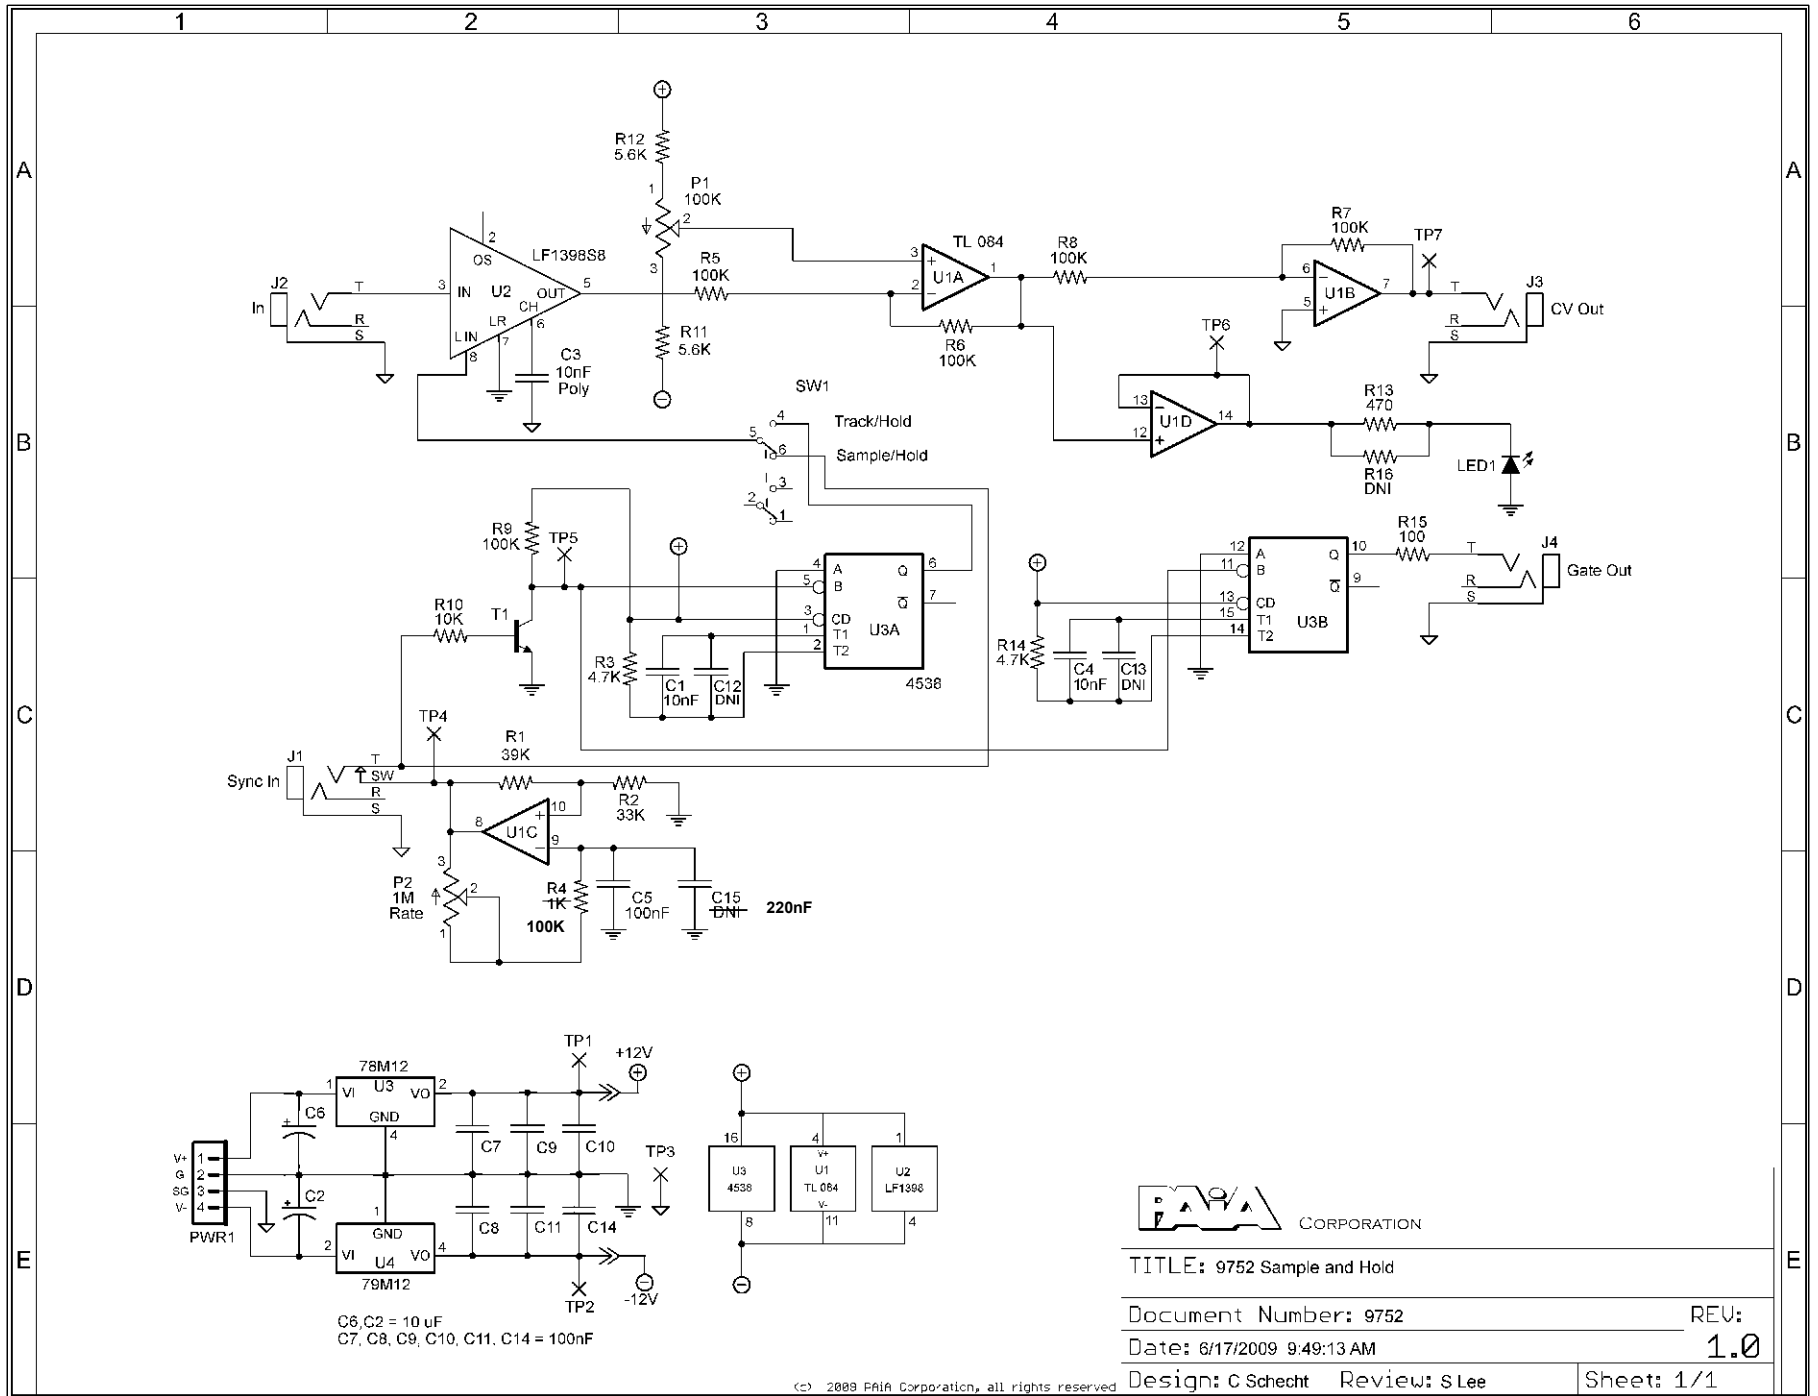


Fig.2 Sample and Hold Schematic
 © 2009 PAIA CORPORATION